 


Aurora Design Quick Start Guide

FMR BTU



BT USB

Basic Radio Control Actions



Virtual Fader



Virtual Balance



Loudness Toggle
On/Off



AVC Toggle**
On/Off

Bluetooth/USB Control Actions



Pair/Voice Command
Conference Call



Pause/Play Music
Mute/Unmute Call



Next Song
Accept Call



Previous Song
Reject/End Call



Next Album*



Previous Album*

Seek/Scan Actions (motorized tuner)

↓ Seek



↓ Scan

When in radio mode, press the Seek button once to seek to the next station. Double press the Seek button to start a scan. The radio will scan to the next station, pause and then continue until any button/action is executed .

Auto Scan Action (standard tuner)



Start Scan



Stop Scan



Cancel Scan

When in radio mode, double twist the tuning knob to start a scan. (The dial pointer will not move while scanning) To stop on a station, turn the tuning knob as shown. The station will be temporarily stored. To find the actual station on the dial, turn the tuning knob within 5 seconds of stopping the scan. When turning the dial in the correct direction towards the station, the radio will mute until the station is found.

Status Voice Assist HD Action



In radio mode, this action will announce the frequency and optionally the channel ID for the current station. In other modes it will announce which input is currently active. (BT phone:streaming/USB/Aux)

Advanced Actions



Signal Strength: In radio mode, While the *Voice Assist HD* is speaking the station information, performing this action again will start a Signal Strength readout. To end, perform action again or tune off station.



Version: This action will announce the firmware version of the FMR and any installed optional card.

Optional BTU/BT/USB Pushbutton

Basic Radio Pushbutton Actions



Status Voice Assist



HD Radio™ Action



Virtual Fader



Virtual Balance



Auto Scan Start/Cancel



Stop Scan

Bluetooth/USB Pushbutton Actions



Pair/Voice Command
Conference Call



Pause/Play Music
Mute/Unmute Call



Next Song
Accept Call



Previous Song
Reject/End Call



Next Album*



Previous Album*

↓ Quick press

↓ Press 1 second

↓ Press & hold

Note: On Wonderbar® radios the seek button can be used in the same manor as the Bluetooth/USB pushbutton actions described above. On Town & Country radios, the Country button will perform the actions on the left and the Town button will perform the actions on the right.

Note: To perform a Control Action, smoothly twist the control forward and back in a continuous motion as shown by the arrows, repeating for the number of arrows shown.

*USB Sequential mode only **Optional feature, engine must be running